

Installation Instructions

ARCHER TABLE LAMP

CODE#7090

Rated Voltage 220-240V~ 50Hz

Thank you for purchasing this quality product. To ensure correct function and safety, please read and follow all instructions carefully before assembly, installation and use of this product. Please keep the instructions for future reference.

Warranty

- Please retain proof of purchase.
- Warranty will be void if there is any damage due to improper usage or modification to the product.
- Failure to comply with the instructions in this manual may increase the risk of damage or injury and will void warranty.


Installation requirements

- Select a suitable location for this light product:
 - Ensure it is on a flat and stable surface.
 - This product is suitable for indoor use only.
 - Do not place flammable material near or over the product.
 - Ensure the product is not installed in direct line of an air vent/system.
 - If the product is placed in an area prone to moisture, ensure that the area is well ventilated and an appropriately rated exhaust fan is used if required. Damage or corrosion caused by moisture is not a product fault, and as such is not covered under warranty.
- Do not exceed the maximum wattage rating.
- Take care not to pull any electrical wires during unpacking as this may damage the connection.
- Lay out all the components on a smooth surface and make sure there are no components missing before assembling.
If parts are missing, return the complete product to the place of purchase for inspection or replacement.
- Check whether the product has been damaged during transport. Do not operate/install any product which appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Do not plug into the mains power socket outlet before or during assembly. Only do so after the portable lamp is fully assembled with the globe installed and is ready to use for the first time.

Installation directions

1. Remove all packaging material from the product.
2. To help with assembly, lay the fitting on its side on a smooth non scratch surface.
3. Install the shade (A) onto the base (E) and secure with the lamp holder ring (C).
4. Install a globe (B - not included) into the lamp holder (D). Do not exceed the maximum wattage rating.
5. Select a suitable location for the product. See the installation requirements above.
6. Insert the plug (F) into the mains power socket outlet and ensure it is fully plugged in.
7. Turn power on at the mains power socket outlet.
8. Use the chain switch on socket to turn the lamp on/off.

Installation Instructions

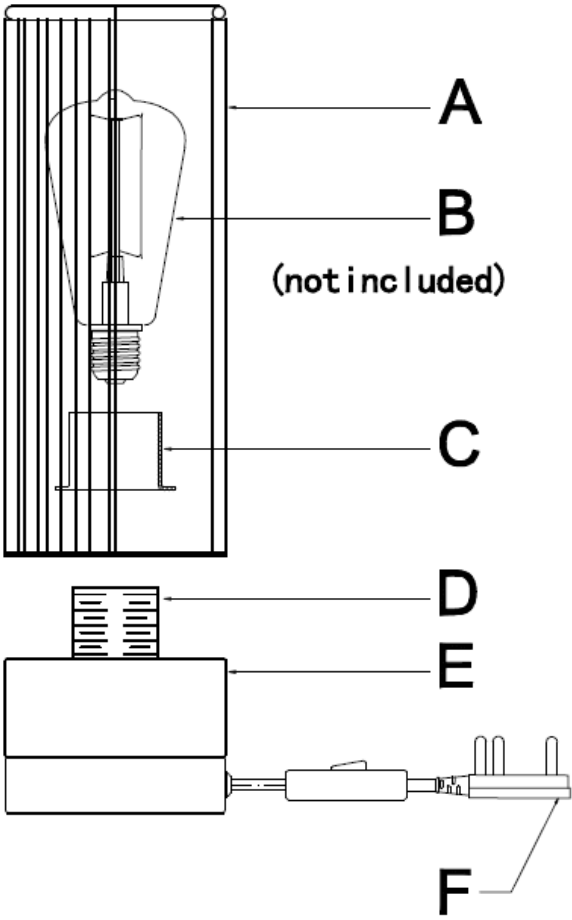

Safety tips

- Always ensure the power is OFF and the fitting has cooled down before performing any maintenance, cleaning, changing the globe or making any adjustment to the fitting.
- The external flexible cable or cord of this luminaire cannot be replaced; if the cable or cord is damaged, the luminaire shall be destroyed.
- To avoid injury or damage to the fitting, ensure that power leads and screws are secure before connecting the power.
- Young children should be supervised to ensure that they do not play with the portable lamp.
- Handle the fitting and/or shade with care to avoid any damage or breakage.
- Select a suitable location away from liquids and hazards.
- Ensure that the fitting does not come in contact with corrosive chemicals, etc.
- To clean, wipe with a dry cloth. Never soak the fitting with water.

Specifications		
SKU #	7090	
Finish/Colour	Black and wood	
Rated Voltage	220-240V~ 50Hz	
Rated Wattage	10W LED	
Lamp Holder	ES / E27	
Dimensions	Dia.:100mm	H:325mm